




# JETPRESSURE

JetPressure provides a tailored solution for professional installers, offering comprehensive electronic pipe documentation. This advanced device seamlessly integrates with the Jetting JetLogger, developed in collaboration with experienced installers recognizing the crucial need for effective pipe condition assessments.

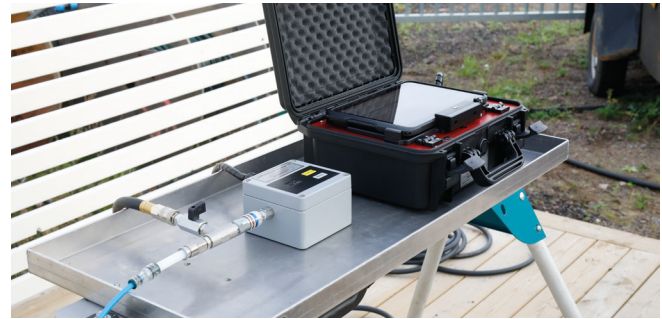

## JETPRESSURE ACCURATE PRESSURE MEASUREMENT UNIT

- Work independent of the fiberblowing machine (duct can be tested before actual fiber installation)
- Easy to use
- Quick connection to machine
- Compact size
- No noise

## TECHNICAL DATA



**Weight:**  
approx 1,1 kg



**WxHxD**  
165x140x80



## INSTRUCTION MANUAL

1. Connect connection adapter.
2. Connect air supply to pipe.
3. Connect duct to the duct connection.  
Prepared for hose 7-10-12 mm.
4. Connect Jetlogger to Jetpressure.
5. Enter position data and pipe parameters in Fiber Blowing Protocol. Choose "Pressure tester" in menu under "Fiber Blowing Machine".
6. Start compressor and supply air.
7. Fill pipe to maximum. Close valve.
8. Press "Reset" on Jetpressure then click "start session".
9. Jetpressure record data every 60 seconds in Jetlogger.
10. Recommended time for data collection 5-10 minutes.
11. End session.
12. Save data.
13. Release air from pipe.

**⚠ Important, open valve and release air from pipe before disconnecting Jetpressure from pipe. Risk of personal injury when disconnecting the pressure tester when the duct is pressurized.**

### How to calibrate Jetpressure

Depending on the altitude/pressure difference, Jetpressure needs to be calibrated.

To calibrate, hold down the two buttons on Jetpressure and then click the Jetlogger power button located just above the battery.


### How change Bar to PSI

Hold down the reset button on Jetpressure and then click the Jetlogger power button located just above the battery. Follow the same procedure to switch back from PSI to Bar.



JetLogger		Fiber Blowing Protocol			
Project	Demo				
Address	Address				
Company	Jetting				
Operator	Johan				
Comments	Comments				
Time - Duration(hh:mm:ss)	27.02.2023, 14:10	Location (GPS)	00,0000', 0,00000', 00,0000 m		
Pipe parameters		Cable parameters		Machine / Compressor	
Manufacturer	Demo	Manufacturer	Manufacturer	Fiber blowing machine	
Pipe type	Singel	Cable type	Cable type	Pressure Tester	
Color / Description		Kabel-Ø:	Cable-Ø	Lubricant	Lubricant
Blue		Fiber Count	no.	Compressor	Compressor
Type of pipe laying		Cable drum-No.		Oil separator	<input type="checkbox"/> Aftercooler <input type="checkbox"/>
Type of pipe laying		Cable tip	Yes <input type="checkbox"/> No <input type="checkbox"/>	Crash test carried out	Yes <input type="checkbox"/> No <input checked="" type="checkbox"/>
Inner pipe diameter	3,5	Cable temperature	Temperature	Max. Pushing force:	
Outer pipe diameter	7	Metrology / Environment		Safety shutdown	Yes <input type="checkbox"/> No <input checked="" type="checkbox"/>
Pipe temperature	Temperature	Start	End	P RHT 90245C 21.9 °C 28 %	
Inner pipe wall surface		Route distance		SEARCHING FOR BLUESENSOR	
Smooth <input type="checkbox"/> Grooves <input checked="" type="checkbox"/>		Operating temperature	21.9°	START SESSION	
		Humidity	28.0		

Jetlogger interface

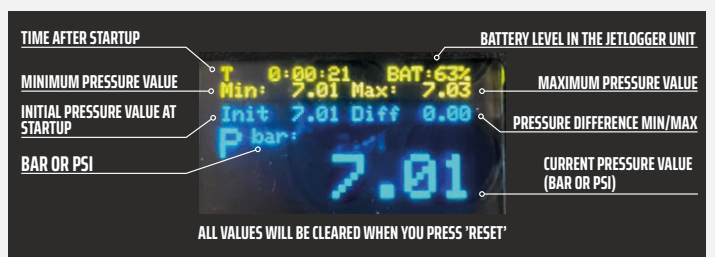

Jetpressure Display